


RUBY-D718VG2AR

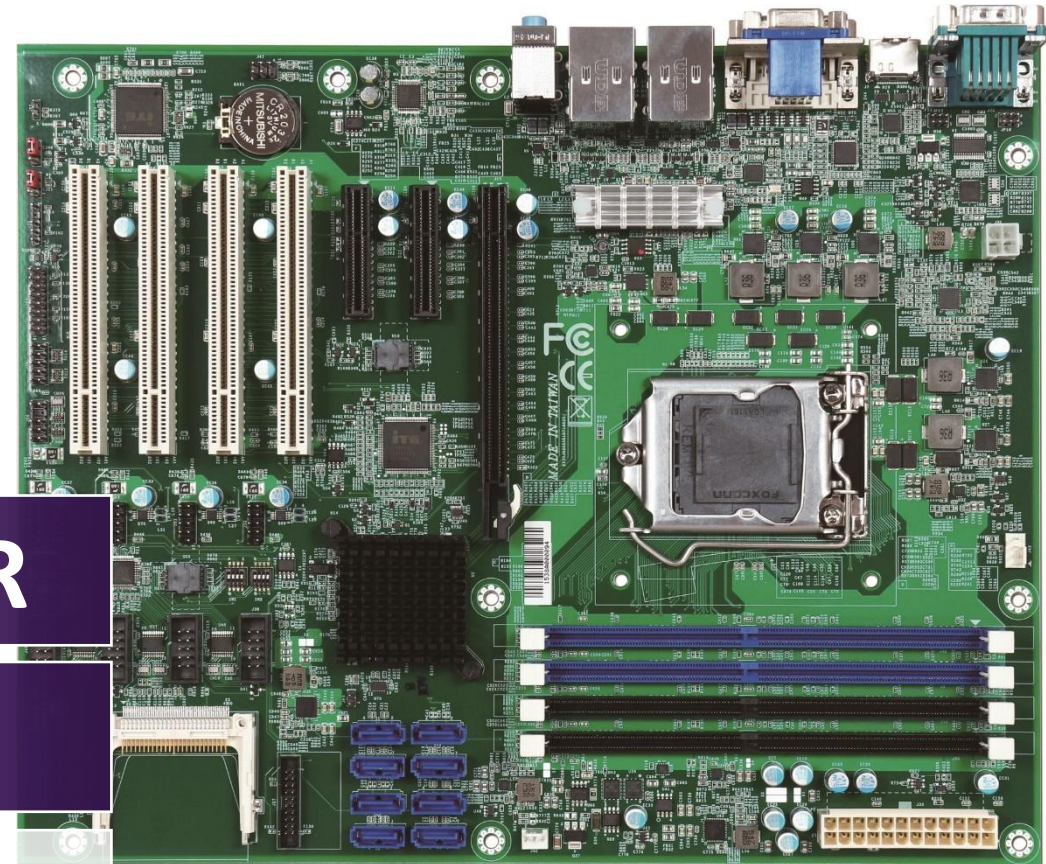

**RUBY-D718VG2AR**

Portwell

Version 1.3

## Revision History

R1.0	Preliminary
R1.1	Modify jumper(JP1)
R1.2	Update support KBL information
R1.3	Add support KBL information

## Contents

Preface .....	5
1 Introduction .....	7
2 Specifications .....	8
2.1 Supported Operating Systems.....	9
2.2 Mechanical Dimensions .....	10
2.3 Power Consumption .....	11
2.4 Environmental Specifications .....	12
3 Block Diagram .....	13
4 Hardware Configuration.....	14
4.1 Jumpers and Connectors.....	14
4.2 Jumpers Settings .....	15
4.3 Connector Settings.....	17
5 Signal Description .....	23
5.1 Watch Dog Signal .....	23
5.2 GPIO Signal .....	25
6 System Resources .....	27
6.1 Intel® Kabylake / Skylake-S PCH .....	27
6.2 Main Memory.....	27
6.3 Installing the Single Board Computer .....	27
6.3.1 Chipset Component Driver.....	28
6.3.2 Intel® HD Graphics 530.....	28

6.3.3	Intel LAN I211AT/I219LM Gigabit Ethernet Controller .....	29
7	BIOS Setup Items .....	30
7.1	Introduction .....	30
7.2	BIOS Setup .....	30
7.2.1	Main .....	31
7.2.2	Configuration .....	32
7.2.3	Security .....	75
7.2.4	Boot .....	77
7.2.5	Save & Exit .....	79
8	Troubleshooting .....	81
8.1	Hardware Quick Installation .....	81
8.2	BIOS Setting .....	83
8.3	FAQ .....	84
9	Portwell Software Service .....	88
10	Industry Specifications .....	89

## **Preface**

This user's guide provides information about the components, features, connectors and BIOS Setup menus available on the RUBY-D718VG2AR. This document should be referred to when designing ATX application. The other reference documents that should be used include the following:

- ✧ Intel Kaby Lake / Sky Lake -S Design Guide
- ✧ Intel Kaby Lake / Sky Lake -S Specification

Please contact Portwell Sales Representative for above documents.

## **Disclaimer**

The information contained within this user's guide, including but not limited to any product specification, is subject to change without notice.

Portwell provides no warranty with regard to this user's guide or any other information contained herein and hereby expressly disclaims any implied warranties of merchantability or fitness for any particular purpose with regard to any of the foregoing. Portwell assumes no liability for any damages incurred directly or indirectly from any technical or typographical errors or omissions contained herein or for discrepancies between the product and the user's guide. In no event shall Portwell be liable for any incidental, consequential, special, or exemplary damages, whether based on tort, contract or otherwise, arising out of or in connection with this user's guide or any other information contained herein or the use thereof.

## **Trademarks**

Product names, logos, brands, and other trademarks featured or referred to within this User's guide or the Portwell website, are the property of their respective trademark holders. These trademark holders are not affiliated with Portwell, our products, or our website.

## Warranty

Portwell makes no representation, warranty or guaranty, express or implied regarding the products except its standard form of limited warranty (“Limited Warranty”). Portwell may in its sole discretion modify its Limited Warranty at any time and from time to time.

Beginning on the date of shipment to its direct customer and continuing for the published warranty period, Portwell represents that the products are new and warrants that each product failing to function properly under normal use, due to a defect in materials or workmanship or due to non-conformance to the agreed upon specifications, will be repaired or exchanged, at Portwell’s option and expense.

## Certification

Portwell is certified to DIN EN ISO 9001:2000 standard.



## Technical Support

Portwell technicians and engineers are committed to providing the best possible technical support for our customers so that our products can be easily used and implemented.

We request that you first visit our website at <http://www.portwell.com.tw/support/> for the latest documentation, utilities and drivers, which have been made available to assist you. If you still require assistance after visiting our website then contact our technical support department by email at [tsd@mail.portwell.com.tw](mailto:tsd@mail.portwell.com.tw) for further assistance. Thank you!

## 1 Introduction

RUBY-D718VG2AR based on the Intel® Core™ Processor which offers 14nm Hi-K process technology with energy efficient architecture. RUBY- D718VG2AR adopts four DDR4 long DIMM sockets and supports up to 64GB memory.

Desktop solution is still popular in the market of DVR and Factory Automation which can fulfill most of these applications; therefore, with high performance and high-end specifications, RUBY-D718 is our first generation Kaby Lake / Sky Lake -S chip architecture on ATX product line.

## 2 Specifications

<b>Main Processor</b>	◆ Intel® Kaby Lake / Sky Lake -S Core™ i Processors
<b>System Chipset</b>	◆ Intel® Q170 or C236 Express chipset
<b>System BIOS</b>	◆ AMI UEFI BIOS
<b>Main Memory</b>	◆ Up to 64 GB in 4 slots 288-pin DIMM sockets. Supports dual channel DDR4 1866/2133 MHz SDRAM.
<b>Graphics</b>	<ul style="list-style-type: none"> <li>◆ Controller: Intel® Gfx Gen 9, HD graphics</li> <li>◆ VGA: Supports VGA up to resolution 1920 x 1200 @ 60Hz</li> <li>◆ DVI-D: Supports DVI-D up to resolution 1920 x 1200 @ 60Hz</li> <li>◆ HDMI: Supports HDMI up to resolution 4096 x 2304 @ 24Hz</li> <li>◆ Support Triple Display</li> </ul>
<b>Expansion Interface</b>	<ul style="list-style-type: none"> <li>◆ One PCIe x16 slot (Gen 3.0 8GT/s)</li> <li>◆ Two PCIe x4 slot</li> <li>◆ Four PCI slots</li> </ul>
<b>SATA Interface</b>	<ul style="list-style-type: none"> <li>◆ Up to eight SATA 6Gb/s ports (Q170 supports six SATA 6Gb/s ports)</li> <li>◆ One SATA 6Gb/s CFEX (switch with one SATA port)</li> </ul>
<b>Input/ Output</b>	<ul style="list-style-type: none"> <li>◆ Serial Ports: Six serial ports, 5 x RS-232 &amp; 1 x RS-232/422/485</li> <li>◆ Support PS/2 Keyboard and mouse connector (Pin Header)</li> <li>◆ USB Port: 6 x USB 3.0, 8 x USB 2.0</li> <li>◆ GPIO connector: 8-bit general purpose Input/ Output</li> <li>◆ Audio Interface: Connector for Mic-In, Line-In and Line-Out</li> </ul>




# RUBY-D718VG2AR

<b>Ethernet</b>	<ul style="list-style-type: none"><li>◆ Supports dual 10/100/1000 Mbps Ethernet port (s) via PCI Express x1 bus which provides 500 MB/s data transmission rate</li><li>◆ Controller: LAN1: Intel i219LM; LAN2: Intel i210AT</li></ul>
<b>High Drive GPIO</b>	<ul style="list-style-type: none"><li>◆ One pin-header for 8 bit GPIO(4bit in &amp; 4bit out)</li></ul>
<b>Mechanical and environmental specifications</b>	<ul style="list-style-type: none"><li>◆ Operating temperature: 0 ~ 60° C</li><li>◆ Storage temperature: -20 ~ 80° C</li><li>◆ Humidity: 5 ~ 90% non-condensing</li><li>◆ Power supply voltage: +3.3 V, +5 V, +12 V, 5 Vsb</li><li>◆ Board size: 304.8mm x 234.8 mm (12" x 9.6")</li></ul>

## 2.1 Supported Operating Systems

- ✧ Windows 7/e support
- ✧ Windows 8.1 / WEI 8.1 support
- ✧ Windows 10 full support
- ✧ Kernel.org Distribution
- ✧ Yocto based Embedded Linux Distribution

## 2.2 Mechanical Dimensions

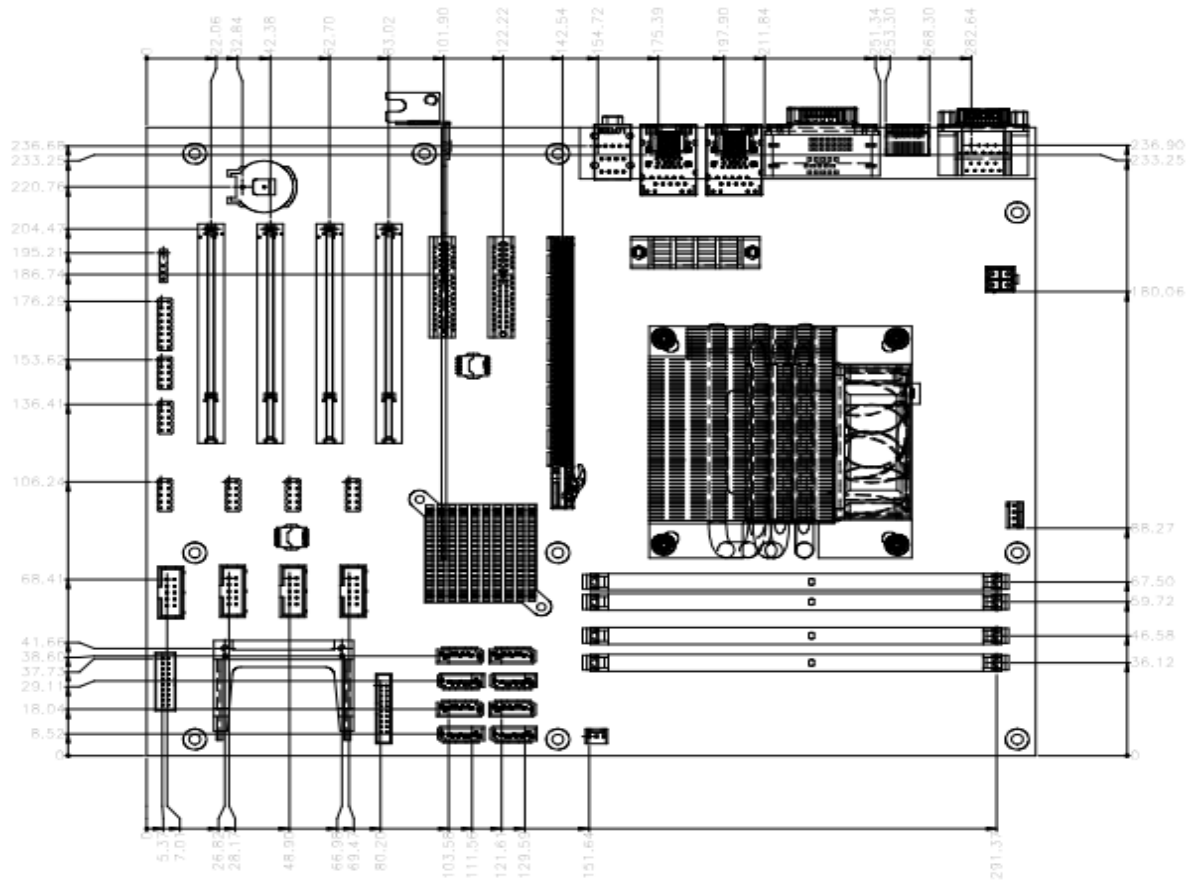

## 2.3 Power Consumption

System Configuration	
CPU Type	Intel® Core™ i7-6700TE CPU @2.4GHz
SBC BIOS	Portwell, Inc. RUBY-D718VG2AR TEST BIOS (51127T00)
Memory	WARIS DDR4 UB-DIMM 2133 8GB*4
VGA Card	Onboard Intel® HD Graphics 530
VGA Driver	Intel® HD Graphics 530 Ver:20.19.15.4326
LAN Card	Onboard Intel® Ethernet Connection I219-LM
LAN Driver	Intel® Ethernet Connection I219-LM Ver:12.13.17.7
LAN Card	Onboard Intel® I210 Gigabit Network Connection
LAN Driver	Intel® I210 Gigabit Network Connection Ver:12.14.7.0
Audio Card	Onboard Realtek ALC886 High Defintion Audio
Audio Driver	Realtek High Defintion Audio Ver:6.0.1.7312
Chip Driver	Intel® Chipset Driver Software Ver:10.0
USB3.0 Driver	Intel® USB3.0 Host Controller Adaptation Ver:1.0.1.45
EC Version	51106T00 (11/06/2015)
CFEX	WARID B473D35D
CDROM	ASUS DRW-24B3ST
Power Supply	FSP460-60PFB

Power Consumption			
<i>Item</i>	<i>Power ON</i>	<i>Full Loading 10Min</i>	<i>Full Loading 30Min</i>
CPU +12V	1.27A	2.76A	3.11A
System +12V	0.06A	0.08A	0.16A
System +3.3V	0.68A	0.70A	0.77A
System +5V	1.29A	1.25A	1.37A
System+ Device +12V	A	2.94A	3.26A
System+ Device +5V	1.82A	2.15A	2.16A
USB2.0 Loading Test	4.86V/ 450 mA		
USB3.0 Loading Test	4.84V/ 900 mA		

## 2.4 Environmental Specifications


Storage Temperature : -20~80°C

Operation Temperature : 0~60°C

Storage Humidity : 5~90%

Operation Humidity: 10~90%

### 3 Block Diagram

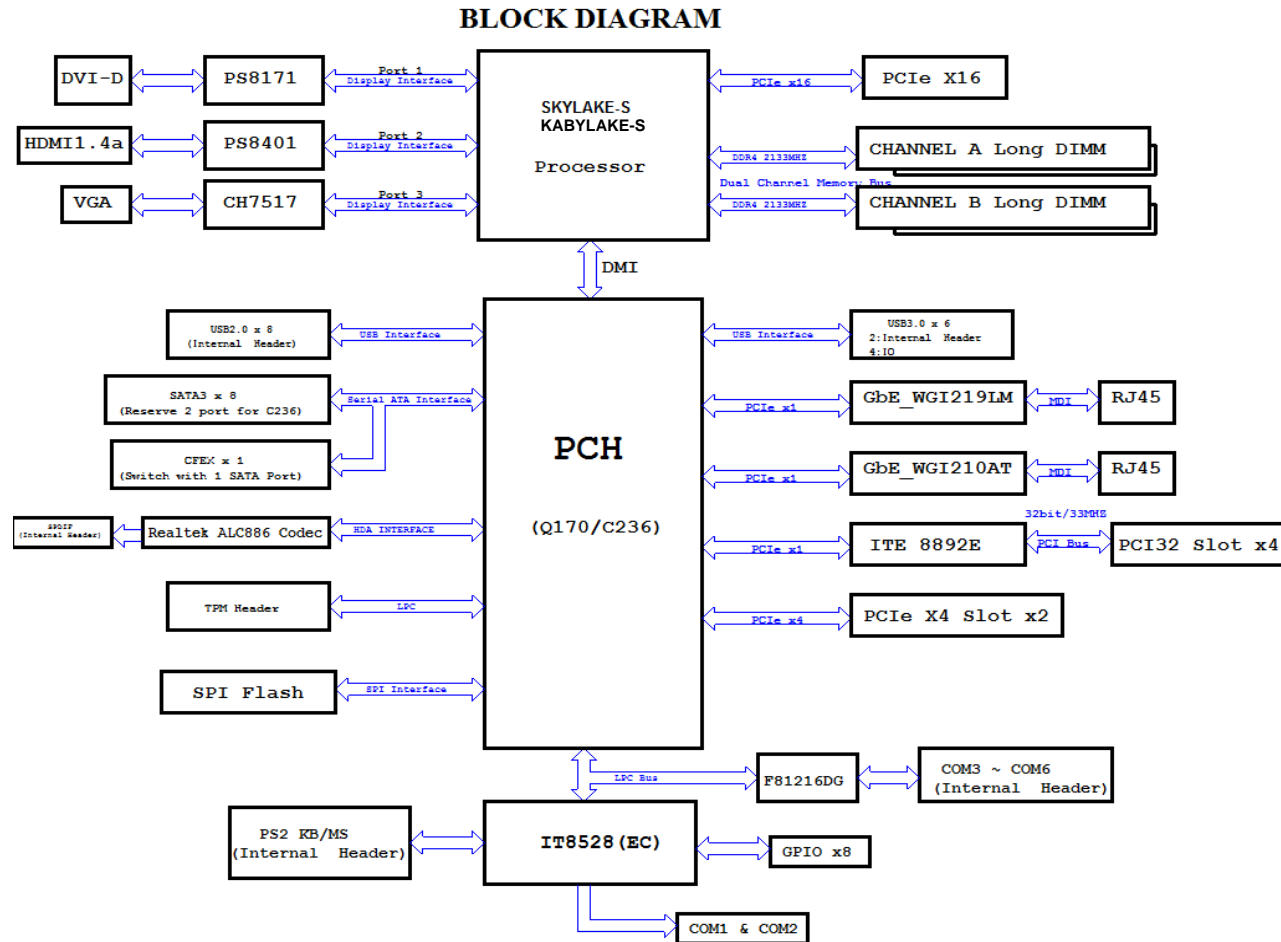

## 4 Hardware Configuration

### 4.1 Jumpers and Connectors

This chapter indicates jumpers', headers' and connectors' locations. Users may find useful information related to hardware settings in this chapter.

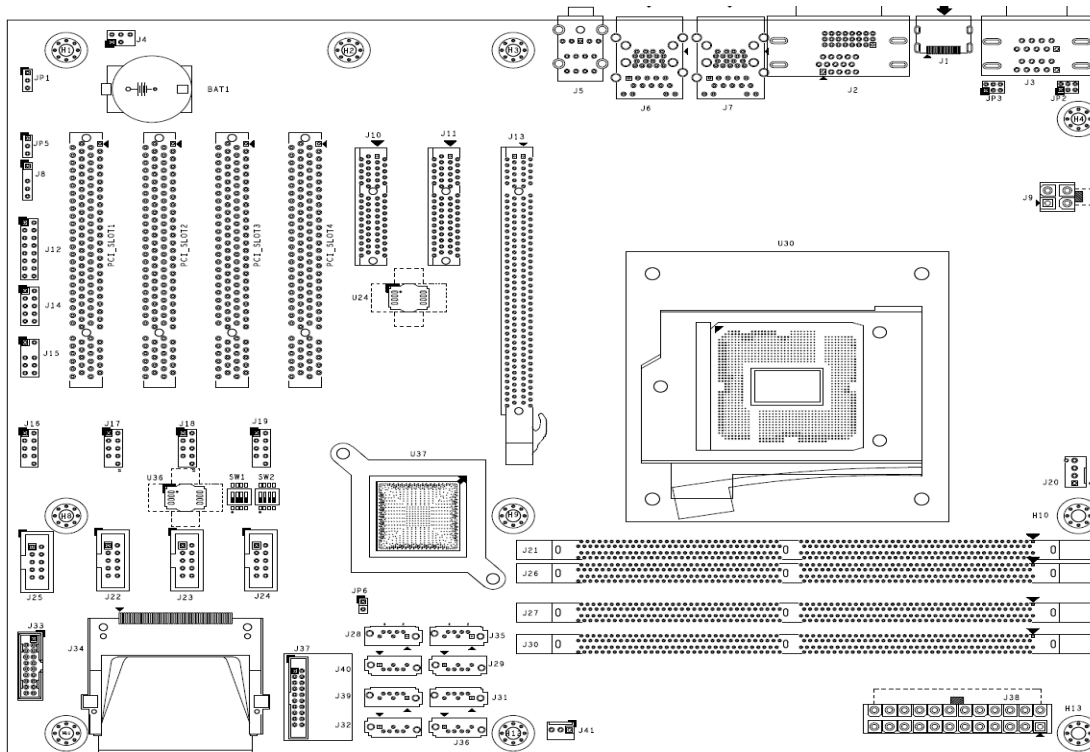


Figure 1, RUBY-D718VG2AR Top View

## 4.2 Jumpers Settings

For users to customize RUBY-D718VG2AR's features. In the following sections, **Short** means covering a jumper cap over jumper pins; **Open** or **N/C** (Not Connected) means removing a jumper cap from jumper pins. Users can refer to Figure 1 for the Jumper allocations.

### Jumper Table

The jumper settings are schematically depicted in this manual as follows:

#### Jump Function List:

Jump	Function	Remark
JP1	AT /ATX Mode Select Jumper	
JP2	RI Function Select Jumper	COM2
JP3	RI Function Select Jumper	COM1
JP5	CMOS Clear Jumper	
JP6	CFEX/SATA Port Select	J34/J28

#### JP1: AT/ATX Mode Selection



PIN No.	Signal Description
1-2, Short	AT
2-3, Short	ATX

## JP2: COM2 RI POWER Select



PIN No.	Signal Description
1-3, Short	5V
3-4, Short	RI
3-5, Short	12V

## JP3: COM1 RI POWER Select



PIN No.	Signal Description
1-3, Short	5V
3-4, Short	RI
3-5, Short	12V

## JP5: Clear CMOS



PIN No.	Signal Description
1-2 Short	Normal Operation
2-3 Short	Clear CMOS Contents


## JP6: SATA Port Selection



PIN No.	Signal Description
1-2, Short	CFEX (J34)
1-2, Open	SATA Connector(J28)



## SW1: BIOS Boot Selection

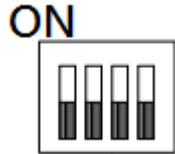

PIN No.	Signal Description
SW1_ON , SW2_OFF	Boot from SPI Flash
SW1_OFF , SW2_ON	Boot from CFEX

## 4.3 Connector Settings

Connector Allocation

I/O peripheral devices are connected to the interface connectors


Connector Function List

Connector	Function	Remark
J1	HDMI Connector	
J2	VGA + DVI Connector	
J3	COM1 & 2 Connector	COM2(RS-232/422/485)
J4	SPDIF Pin HDR	
J5	Audio Jack ( Mic + Line in + Line out )	
J6	RJ45 + USB3.0 Connector	
J7	RJ45 + USB3.0 Connector	
J8	SMBUS Pin HDR	5x1 pin header
J9	+12V Power Connector	CPU Power
J10	PCIe x 4 Slot	Gen3

# RUBY-D718VG2AR

J11	PCIe x 4 Slot	Gen3
J12	Front Panel Pin HDR	
J13	PCIe x 16 Slot	Gen3
J14	General Purpose I/O Pin HDR	
J15	PS/2 KB & MS Pin HDR	
J16/J17/J18/J19	Internal USB2.0 Pin HDR	
J20	CPU FAN Power Connector	
J21/J26/J27/J30	DDR4 Socket	
J22	COM5 Connector	RS-232
J23	COM4 Connector	RS-232
J24	COM3 Connector	RS-232
J25	COM6 Connector	RS-232
J28/J29/J31/J32 J35/J36/J39/J40	SATA GEN3 Connector	J35 & J29 For C236 PCH
J33	Internal USB3.0 Pin HDR	
J34	CFEX	
J37	TPM	
J38	ATX 24 Pin Power Connector	
J41	System FAN Power Connector	
PCI Slot1-4	PCI Slot	
U36	BIOS EEPROM Socket	
U24	EC EEPROM Socket	

## J4: SPDIF Pin HDR




PIN No.	Signal Description	PIN No.	Signal Description
1	GND	2	GND
3	SPDIF_IN	4	SPDIF_OUT
	Key	6	+5V

## J8: SMBUS Pin HDR



PIN No.	Signal Description
1	SMB_CLK
	Key
3	GND
4	SMB_DATA
5	+5V


## J12: Front Panel Pin HDR

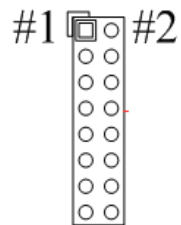

PIN No.	Signal Description	PIN No.	Signal Description
1	PWR_LED (+)	2	Buzzer (+)
3	PWR_LED (-)	4	N/C
5	LAN1_ACT_LED (+)	6	N/C
7	LAN1_ACT_LED (-)	8	Buzzer (-)
9	LAN2_ACT_LED (-)	10	Power On (-)
11	LAN2_ACT_LED (+)	12	Power On (+)
13	HDD_LED (+)	14	Reset (+)
15	HDD_LED (-)	16	Reset (-)


# RUBY-D718VG2AR

## J14: GPIO Pin HDR

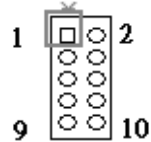


PIN No.	Signal Description	PIN No.	Signal Description
1	GPIO	2	GPIO
3	GPIO	4	GPIO
5	GPIO	6	GPIO
7	GPIO	8	GPIO
9	Ground	10	+5V

## J15: PS/2 KB & MS

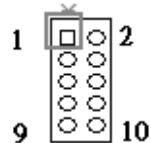


PIN No.	Signal Description	PIN No.	Signal Description
1	Mouse Data	2	Keyboard Data
	Key		Key
5	Ground	6	Ground
7	+5V_Dual	8	+5V_Dual
9	Mouse Clock	10	Keyboard Clock

## J16/J17/J18/J19: Internal USB2.0 Pin HDR

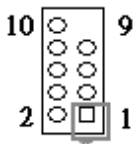


PIN No.	Signal Description	PIN No.	Signal Description
1	+5V_Dual	2	+5V_Dual
3	USB-	4	USB-
5	USB+	6	USB+
7	GND	8	GND
	Key	10	N/C

## J22/J23/J24/J25: COM3~COM6 Serial Port Connector

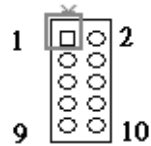


PIN No.	Signal Description	PIN No.	Signal Description
1	DCD	2	RXD
3	TXD	4	DTR
5	Ground	6	DSR
7	RTS	8	CTS
9	RI	10	N/C

## J33 : Internal USB3.0 Connector

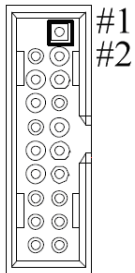

PIN No.	Signal Description	PIN No.	Signal Description
	Key	1	+5V
19	USB3_RXN	2	USB3_RXN
18	USB3_RXP	3	USB3_RXP
17	GND	4	GND
16	USB3_TXN	5	USB3_TXN
15	USB3_TXP	6	USB3_TXP
14	GND	7	GND
13	USB2_N	8	USB2_N
12	USB2_P	9	USB2_P
11	GND	10	GND

## J37 : TPM Pin HDR

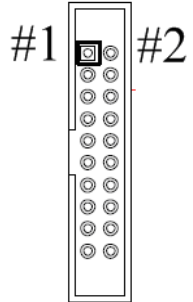

PIN No.	Signal Description	PIN No.	Signal Description
1	Clock	2	GND
3	LFRAME#	4	N/C
5	PLTRST#	6	+5V
7	LAD3	8	LAD2
9	+3.3V	10	LAD1
11	LAD0	12	GND
13	SMB_CLK	14	SMB_DATA
15	+3V_Dual	16	SERIRQ
17	GND	18	N/C
19	N/C	20	N/C

## 5 Signal Description

### 5.1 Watch Dog Signal

WDT Control Command Example

```
#Define WDTCFG 0x06//WDT Timer Control Register
```

```
#Define WDTMIN 0x07//WDT Timer Counter Register (Minute)
```

```
#Define WDTSEC 0x08//WDT Timer Counter Register (Second)
```

```
VOID Write_EC_SRAM(UINT8 Offset,UINT8 Value){
```

```
IoWrite8(0xE300+Offset,Value);
```

```
}
```

```
Byte Read_EC_SRAM(UINT8 Offset){
```

```
IoRead8(0xE300+offset,Value);
```

```
return Value;
```

```
}
```

```
void WDT()
```

```
{
```

```
    // Enable WDT 30sec
```

```
    Write_EC_SRAM(WDTSEC,30);
```

## RUBY-D718VG2AR

```
Write_EC_SRAM(WDTCFG,0x01);//Bit0: WDT Enable, BIT1: 0:Second Mode
```

```
// Enable WDT 5min
```

```
Write_EC_SRAM(WDTSEC,5);
```

```
Write_EC_SRAM(WDTCFG,0x03);//Bit0: WDT Enable, BIT1: 1:Minute Mode
```

```
// Enable WDT 10min, 20sec
```

```
Write_EC_SRAM(WDTSEC,20);
```

```
Write_EC_SRAM(WDTSEC,10);
```

```
Write_EC_SRAM(WDTCFG,0x03);//Bit0: WDT Enable, BIT1: 1:Minute Mode
```



## 5.2 GPIO Signal

GPIO Control Command Example (C Language)

```
#Define GPCR 0x2B//GPIO Control Register, Bit7 = GPIO7, Bit6 = GPIO6, ..., 0: Output; 1: Input
```

```
#Define GPDR 0x2C//GPIO Data Register, Bit7 = GPIO7, Bit6 = GPIO6, ..., 0: Low; 1: High
```

```
VOID Write_EC_SRAM(UINT8 Offset,UINT8 Value){
```

```
IoWrite8(0xE300+Offset,Value);
```

```
}
```

```
Byte Read_EC_SRAM(UINT8 Offset){
```

```
IoRead8(0xE300+offset,Value);
```

```
return Value;
```

```
}
```

```
void GPIO()
```

```
{
```

```
int Temp;
```

```
// Get GPIO data
```

```
Temp = Read_EC_SRAM(GPDR);
```

## RUBY-D718VG2AR

```
// Set GPIO7 High
Temp |= 0x80;
Write_EC_SRAM(GPDR,Temp);           //Bit7: GPIO7 status, 0: Low 1: High
}
```

## 6 System Resources

### 6.1 Intel® Kabylake / Skylake-S PCH

Intel® Q170 Chipset (Intel® GL82Q170 PCH)

Intel® C236 Chipset (Intel® GL82C236 PCH)

### 6.2 Main Memory

RUBY-D718 provides 4 x 288-pin Long-DIMM sockets which supports DDR4 ECC/non-ECC memory. The maximum memory can be up to 64GB. Memory clock and related settings can be detected by BIOS via SPD interface.

Watch out the contact and lock integrity of memory module with socket, it will impact on the system reliability. Follow normal procedures to install memory module into memory socket. Before locking, make sure that all modules have been fully inserted into the card slots.

### 6.3 Installing the Single Board Computer

To install your RUBY-D718 into standard chassis or proprietary environment, please perform the following:

Step 1 : Check all jumpers setting on proper position

Step 2 : Install and configure CPU,CPU cooling and memory module on right position

Step 3 : Place RUBY-D718 into the dedicated position in the system

Step 4 : Attach cables to existing peripheral devices and secure it

## **WARNING**

Please ensure that mother board is properly inserted and fixed by mechanism.

## **Note:**

Please refer to section 6.3.1 to 6.3.4 to install INF/Graphic/LAN

### 6.3.1 Chipset Component Driver

RUBY-D718 is based on Intel® Q170/H110/C236 chipset and desktop processors including Core™ i7 / i5 / i3 sku . It's a new chipset that some old operating systems might not be able to recognize. To overcome this compatibility issue, for Windows Operating Systems such as Windows 8, please install its INF before any of other Drivers are installed. You can find very easily this chipset component driver in RUBY-D718 CD-title

### 6.3.2 Intel® HD Graphics 530

RUBY-D718 has integrated Intel® HD Graphics 530 which supports DirectX 12 、 OpenCL 2.0 、 OpenGL 4.4. It is the most advanced design to gain an outstanding graphic performance. RUBY-D718 supports DVI-D, VGA, HDMI display port. This combination makes RUBY-D718 an excellent performance hardware.

## **Drivers Support**

Please find the Graphic driver in the RUBY-D718 CD-title. The driver supports Windows 8.

## **Note:**

If you select H110 chipset, the board only can support dual display.

## RUBY-D718VG2AR

### 6.3.3 Intel LAN I211AT/I219LM Gigabit Ethernet Controller

- Intel I210AT Gigabit Ethernet controller and 1x RJ45 connectors on rear I/O
- Intel I219LM Gigabit Ethernet controller and 1x RJ45 connectors on rear I/O

#### **Drivers Support**

Please find Intel I210AT/I219LM LAN driver in /Ethernet directory of RUBY-D718 CD-title. The driver supports Windows 8.

## 7 BIOS Setup Items

### 7.1 Introduction

The following section describes the BIOS setup program. The BIOS setup program can be used to view and change the BIOS settings for the module. Only experienced users should change the default BIOS settings.

### 7.2 BIOS Setup


Power on the computer and the system will start POST (Power on Self Test) process. When the message below appears on the screen, press <Delete> or <Esc> key will enter BIOS setup screen.

#### Press<Delete> or <Esc> to enter SETUP

If the message disappears before responding and still wish to enter Setup, please restart the system by turning it OFF and On or pressing the RESET button. It can be also restarted by pressing <Ctrl>, <Alt>, and <Delete> keys on keyboard simultaneously.

#### Press <F1> to Run General Help or Resume

The BIOS setup program provides a General Help screen. The menu can be easily called up from any menu by pressing <F1>. The Help screen lists all the possible keys to use and the selections for the highlighted item. Press <Esc> to exit the Help Screen.

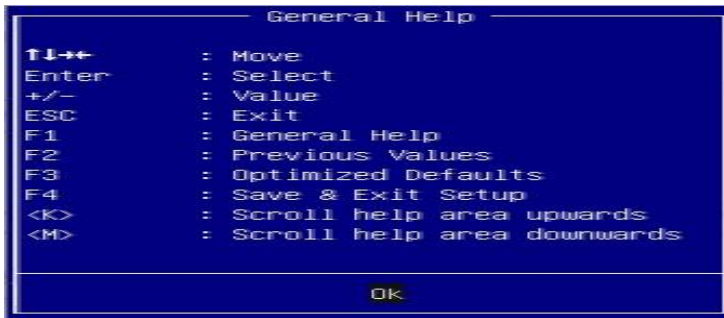

# RUBY-D718VG2AR

## 7.2.1 Main

Use this menu for basic system configurations, such as time, date etc.




Feature	Description	Options
<b>System Date</b>	The date format is <Day>, <Month> <Date> <Year>. Use [ + ] or [ - ] to configure system Date.	
<b>System Time</b>	The time format is <Hour> <Minute> <Second>. Use [ + ] or [ - ] to configure system Time.	

# RUBY-D718VG2AR

## 7.2.2 Configuration

Use this menu to set up the items of special enhanced features

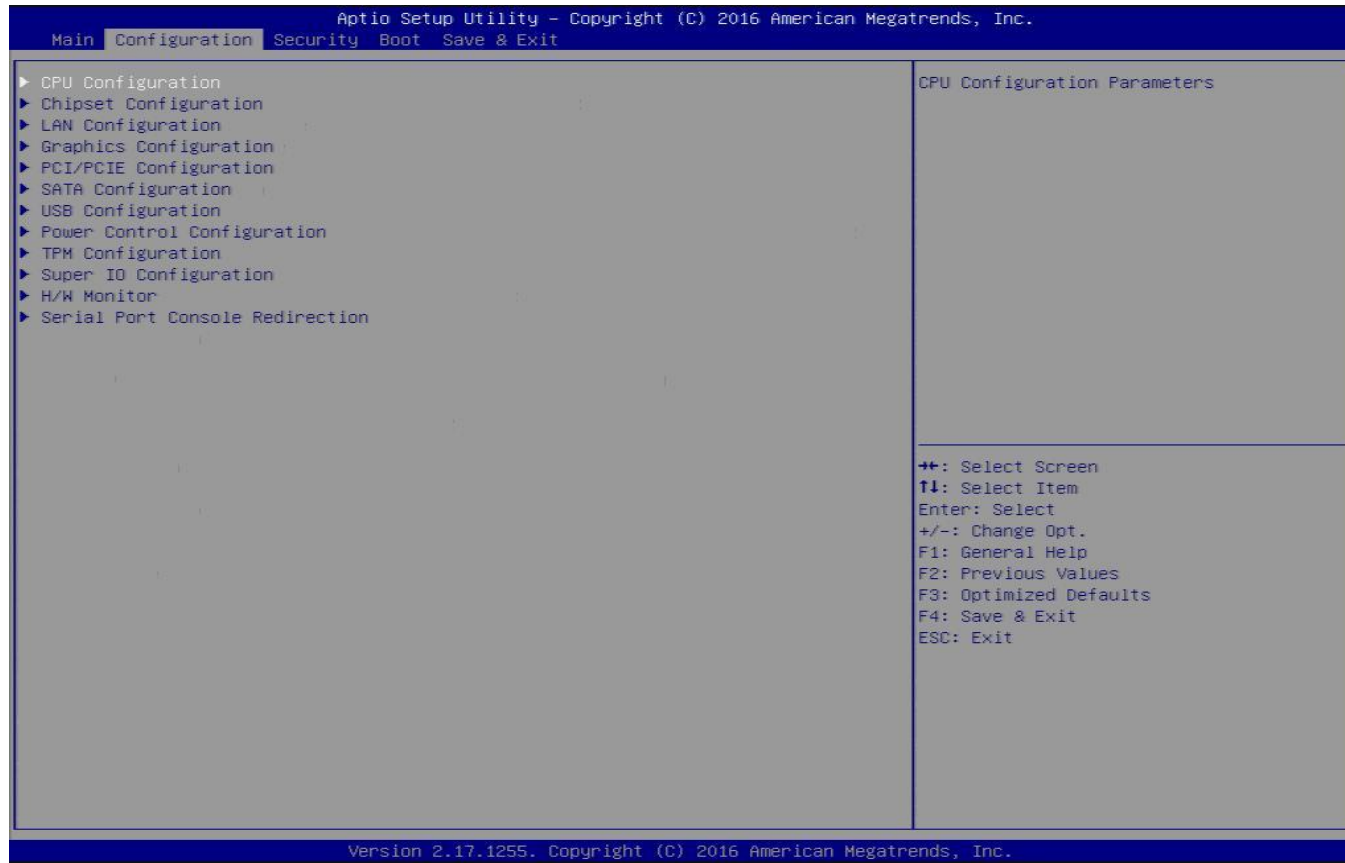



# RUBY-D718VG2AR

## CPU Configuration

### CPU Configuration Parameters

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Configuration

CPU Configuration	Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.
Intel(R) Core(TM) i7-6700T CPU @ 2.80GHz	
CPU Signature	506E3
Max CPU Speed	2800 MHz
Min CPU Speed	800 MHz
CPU Speed	2700 MHz
Processor Cores	4
Hyper Threading Technology	Supported
Intel VT-x Technology	Supported
Intel SMX Technology	Supported
64-bit	Supported
EIST Technology	Supported
CPU C3 state	Supported
CPU C6 state	Supported
CPU C7 state	Supported
L1 Data Cache	32 kB x 4
L1 Code Cache	32 kB x 4
L2 Cache	256 kB x 4
L3 Cache	8 MB
L4 Cache	Not Present
Hyper-threading	[Enabled]
Active Processor Cores	[All]
Intel Virtualization Technology	[Enabled]
Intel(R) SpeedStep(tm)	[Enabled]
Turbo Mode	[Enabled]
Configurable TDP Boot Mode	[Nominal]
Configurable TDP Lock	[Disabled]
CTDP BIOS control	[Disabled]
CPU C states	[Disabled]

++: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.

Feature	Description	Options
<b>Hyper-Threading</b>	Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.	Disabled, ★Enabled.
<b>Active Processor Cores</b>	Select the number of cores to enable in each processor package.	★All, 1,2,3
<b>Intel Virtualization Technology</b>	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.	Disabled, ★Enabled.
<b>Intel SpeedStep</b>	Allows more than two frequency ranges to be supported	Disabled, ★Enabled.
<b>Turbo Mode</b>	Turbo Mode	Disabled, ★Enabled.
<b>Configurable TDP Boot Mode</b>	Configurable TDP Mode as Nominal/Down/Up/Deactivate TDP selection. Deactivate option will set MSR to Nominal and MMIO to Zero	★Nominal,Down,Up, Deactivate
<b>Configurable TDP Lock</b>	Configurable TDP Mode Lock sets the Lock bits on TURBO_ACTIVATION_RATIO and CONFIG_TDP_CONTROL. Note:When CTD Lock is enabled Custom ConfigTDP Count will be forced to 1 and Custom ConfigTDP Boot Index will be forced to 0	★Disabled, Enabled.
<b>CTDP BIOS control</b>	Enabled CTD control via runtime ACPI BIOS methods. This “BIOS only” feature does not require EC or driver support	★Disabled, Enabled.
<b>CPU C states</b>	Enable or disable CPU C states	★Disabled, Enabled.

# RUBY-D718VG2AR

## Chipset Configuration

### Configuration Chipset feature

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Configuration

Chipset Configuration	VT-d capability
Total Memory	8192 MB
DIMM#0	8192 MB
DIMM#1	Not Present
DIMM#2	Not Present
DIMM#3	Not Present
VT-d	[Enabled]
Above 4GB MMIO BIOS assignment	[Disabled]
HD Audio	[Enabled]
Port 80h Redirection	[LPC Bus]
▶ AMT Configuration	

++: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.

# RUBY-D718VG2AR

Feature	Description	Options
<b>VT-d</b>	VT-d capability	Disabled, ★Enabled
<b>Above 4GB MMIO BIOS assignment</b>	Enable/Disable above 4GB MemoryMappedIO BIOS assignment This is disabled automatically when Aperture Size is set to 2048MB	★Disabled, Enabled
<b>HD Audio</b>	Control Detection of the HD-Audio device. Disabled = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled	Disabled, ★Enabled
<b>Port 80h Redirection</b>	Control where the port 80h cycles are sent	★LPC Bus,PCIE Bus

# RUBY-D718VG2AR

## AMT Configuration

### Configure Active Management Technology Parameters



Feature	Description	Options
Intel AMT	Enable/Disable Intel(R) Active Management Technology BIOS Extension. Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.	★ Disabled, Enabled
Un-Configure ME	OEMFlag Bit 15: Un-Configure ME without password	★ Disabled, Enabled

# RUBY-D718VG2AR

## LAN Configuration

Configuration on Board LAN device.

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Configuration

LAN Configuration

Enable or disable onboard NIC.

Intel Ethernet Controller I219-LM  
LAN MAC Address 00-90-FB-58-56-AE  
PCH LAN Controller [Enabled]  
Wake on LAN [Enabled]  
Launch Legacy PXE Rom [Disable]

Intel Ethernet Controller WGI210AT  
LAN MAC Address 00-90-FB-58-56-AF  
Intel I210 LAN Controller [Enabled]  
Wake on LAN I210-AT [Disable]  
Launch Legacy PXE Rom [Disable]

++: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.

Feature	Description	Options
<b>PCH LAN Controller</b>	Enable or Disable onboard NIC	Disabled, ★ Enabled.
<b>Wake on LAN</b>	Enabled or disable integrated LAN to wake the system.	Disabled, ★ Enabled
<b>Launch Legacy PXE Rom</b>	Launch Legacy PXE Rom.[Disable] Not launch Rom, [Enable] Force launch Rom,[Auto] Auto detect LAN Cable status to Enable/Disable Rom initial	★ Disabled, Enabled,Auto
<b>Intel I210 LAN Controller</b>	Intel I210 LAN Controller	Disabled, ★ Enabled.
<b>Wake on LAN I210-AT</b>	Enabled or disable integrated LAN to wake the system.	★ Disabled, Enabled.
<b>Launch Legacy PXE Rom</b>	Launch Legacy PXE Rom.[Disable] Not launch Rom, [Enable] Force launch Rom,[Auto] Auto detect LAN Cable status to Enable/Disable Rom initial	★ Disabled, Enabled,Auto

# RUBY-D718VG2AR

## Graphics Configuration Configuration Graphics Settings

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Configuration

Graphics Configuration		Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx.
Primary Display	[Auto]	
Primary PCIE	[Auto]	
Internal Graphics	[Auto]	
GTT Size	[8MB]	
Aperture Size	[256MB]	
DVMT Pre-Allocated	[32M]	
DVMT Total Gfx Mem	[256M]	
Primary IGFX Boot Display	[VBIOS Default]	

++: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.




# RUBY-D718VG2AR

Feature	Description	Options
<b>Primary Display</b>	Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx.	★Auto, IGFX, PEG,PCIE
<b>Primary PCIE</b>	Select Auto/PCIE1 of D28:F0,PCIE9 of D29:F1, Graphics device should be Primary PCIE	★Auto,PCIE1,PCIE9
<b>Internal Graphics</b>	Keep IGFX enabled based on the setup options.	★Auto, Disabled, Enabled.
<b>GTT Size</b>	Select the GTT Size	2MB,4MB, ★8MB
<b>Aperture Size</b>	Select the Aperture Size	128MB,★256MB,512MB, 1024MB,2048MB,4096MB
<b>DVMT Pre-Allocated</b>	Select DVMT 5.0 Pre-Allocated Graphics Memory size used by the Internal Graphics Device.	★ 32M, 64M, 96M, 128M, 160M, 192M, 224M, 256M, 288M, 320M , 352M, 384M, 416M, 448M, 480M, 512M. 1024M,1536M,2048M...
<b>DVMT Total Gfx Mem</b>	Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.	128MB,★256MB, MAX.
<b>Primay IGFX Boot Display</b>	Select the Video Device which will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display	★VBIOS Default, DVI,VGA, HDMI.

# RUBY-D718VG2AR

## PCI/PCIe Configuration

### PCI, PCI-X and PCI Express Settings.

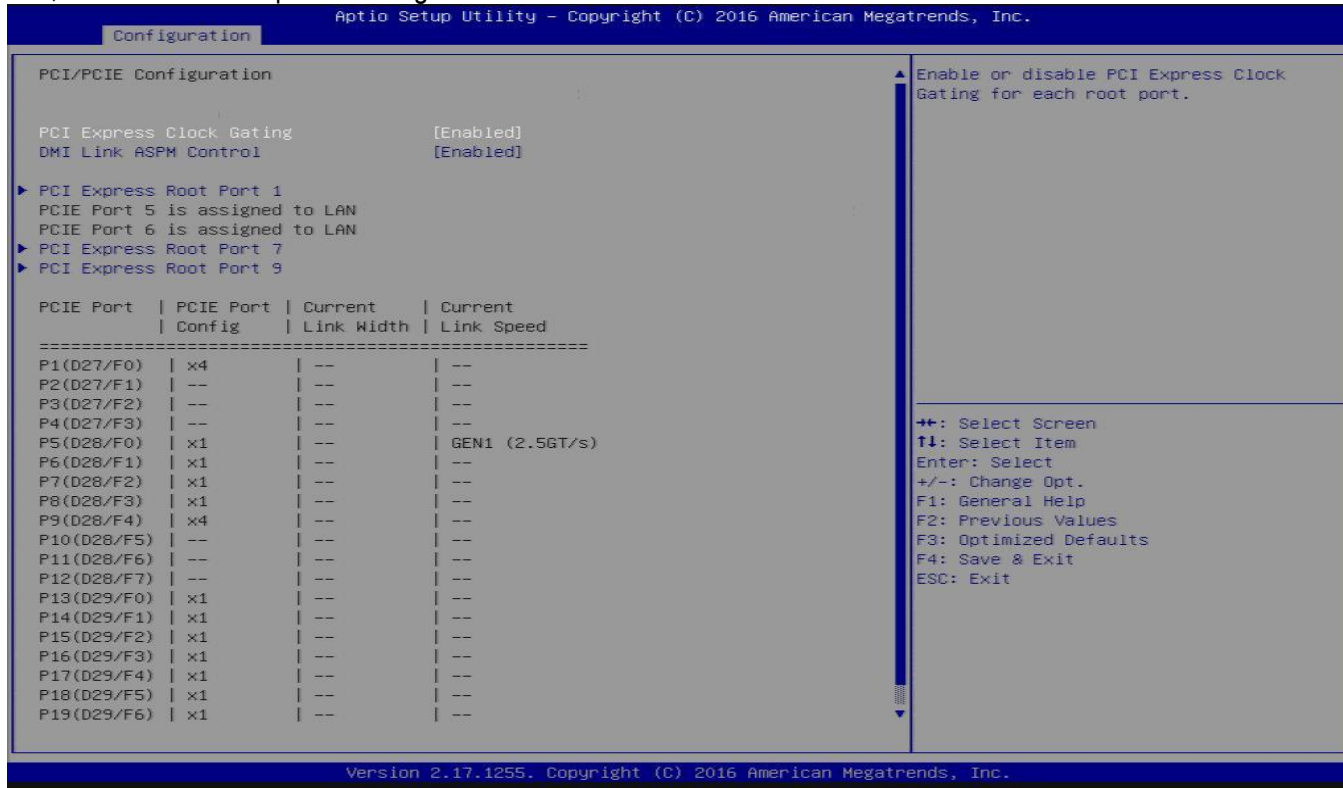

Feature	Description	Options
<b>PCI Express clock Gating</b>	Enable or disable PCI Express clock Gating for each root port.	Disabled ★Enabled
<b>DMI Link ASPM Control</b>	Enable/Disable the control of Active State Power Management on SA side of the DMI Link.	Disabled ★Enabled

# RUBY-D718VG2AR

## PCI Express Root Port 1,7,9



Feature	Description	Options
PCI Express Root Port 1,7,9	Control the PCI Express Root Port.	Disabled, ★Enabled
ASPM Support	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO-BIOS auto configure DISABLE – Disables ASPM	★ Disabled, L0s, L1, L0sL1, Auto
PCIe Speed	Select PCI Express port speed	★Auto,Gen1,Gen2,Gen3

# RUBY-D718VG2AR

## SATA Configuration SATA Device Options Settings

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Configuration

SATA Controller(s)	[Enabled]	▲ Enable or disable SATA Device.
SATA Mode Selection	[AHCI]	
Serial ATA Port 0	Empty	
Software Preserve	Unknown	
Port 0	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Serial ATA Port 1	Empty	
Software Preserve	Unknown	
Port 1	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Serial ATA Port 2	Empty	
Software Preserve	Unknown	
Port 2	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Serial ATA Port 3	Empty	
Software Preserve	Unknown	
Port 3	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Serial ATA Port 4	Empty	
Software Preserve	Unknown	
Port 4	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Serial ATA Port 5	Empty	

▲: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.

Feature	Description	Options
<b>SATA Controller(s)</b>	Enable or disable SATA Device.	★Enabled, Disabled
<b>SATA Mode Selection</b>	Determines how SATA controller(s) operate.	★AHCI, RAID
<b>Port 0-5</b>	Enable or Disable SATA Port	Disabled, ★Enable
<b>Hot Plug</b>	Designates this port as Hot Pluggable	★Disabled, Enabled
<b>External SATA</b>	External SATA Support.	★Disabled, Enabled
<b>SATA Device Type</b>	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.	★ Hard Disk Drive, Solid State Drive

# RUBY-D718VG2AR

## USB Configuration

### USB Configuration Parameters.

The screenshot shows the Aptio Setup Utility interface for USB Configuration. The title bar reads "Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc." and the current screen is labeled "Configuration".

The main content area is divided into two columns. The left column lists configuration options:

- USB Configuration
- USB Devices:  
1 Keyboard, 1 Mouse
- Legacy USB Support [Enabled]
- XHCI Legacy Support [Enabled]
- XHCI Hand-off [Disabled]
- USB Mass Storage Driver Support [Enabled]
- PCH USB Configuration

The right column contains a descriptive text for the selected option (Legacy USB Support):

Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.

At the bottom right of the main area, a list of navigation keys is provided:

- ←→: Select Screen
- ↑↓: Select Item
- Enter: Select
- +/-: Change Opt.
- F1: General Help
- F2: Previous Values
- F3: Optimized Defaults
- F4: Save & Exit
- ESC: Exit

The footer of the utility displays "Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc."

## RUBY-D718VG2AR

Feature	Description	Options
<b>Legacy USB Support</b>	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.	★Enabled, Disabled,Auto
<b>XHCI Legacy Support</b>	Enable/Disable XHCI Controller Legacy support.	★Enable, Disabled
<b>XHCI Hand-off</b>	This is workaround for OSES without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.	Enabled, ★Disabled
<b>USB Mass Storage Driver Support</b>	Enable/Disable USB Mass Storage Driver Support.	Disabled, ★Enabled



# RUBY-D718VG2AR

## PCH USB Configuration

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Configuration

USB Configuration	
USB Precondition	[Disabled]
xDCI Support	[Disabled]
USB Port Disable Override	[Disabled]

Precondition work on USB host controller and root ports for faster enumeration.

←→: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.

## RUBY-D718VG2AR

Feature	Description	Options
<b>USB Precondition</b>	Precondition work on USB host controller and root ports for faster enumeration.	Enabled, ★Disabled
<b>xDCI Support</b>	Enable/Disable xDCI (USB OTG Device).	★Disabled, Enabled
<b>USB Port Disable Override</b> (Select Per-Pin)	Selectively Enable/Disable the corresponding USB port from reporting a Device Connection to the controller.	★Disabled, Select Per-Pin
<b>USB HS Physical Connector #0-9,#12-13</b>	Enable /Disable USB port.	★Enabled, Disabled

# RUBY-D718VG2AR

## Power Control Configuration

### System Power Control Configuration Parameters

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Configuration

Power Control Configuration		Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
Enable Hibernation	[Enabled]	
ACPI Sleep State	[S3 (Suspend to RAM)]	
Restore AC Power Loss	[Power Off]	
RTC Wakeup	[Disabled]	
System Time	[15:02:42]	
Wake up day	0	
Wake up Time(HH:mm:ss)	[00:00:00]	

++: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.

Feature	Description	Options
<b>Enable Hibernation</b>	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.	Disabled, ★Enabled
<b>ACPI Sleep State</b>	Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.	Suspend Disabled, ★S3 (Suspend to RAM)
<b>Restore AC Power Loss</b>	Specify what state to go to when power is re-applied after a power failure (G3 state)	Power On, ★Power Off
<b>RTC Wakeup</b> (Enabled)	Enable or disable System wake on alarm event. [Enabled], system will wake on the Hour: Min: Sec specified. [Disabled] Turn off RTC Wakeup.	★Disabled, Enabled
<b>Wake up day</b>	Select 0 for daily system wake up 1-31 for which day of the month that you would like the system to wake up	
<b>Wake up Time(HH: mm: ss)</b>	Use [Enter], [TAB] to select field, HH: 0-23, mm: 0-59, ss: 0-59	

# RUBY-D718VG2AR

## TPM Configuration

### Trusted Computing settings

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Configuration

TPM Configuration

Security Device Support [Disable]

Current Status Information  
NO Security Device Found

++: Select Screen  
↑: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.

Feature	Description	Options
<b>Security Device Support</b> (Enabled)	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A Interface will not be available.	★Disabled, Enabled
<b>Device Select</b>	TPM 1.2 will restrict support to TPM 1.2 devices, TPM 2.0 will restrict support to TPM 2.0 devices, Auto will support both with the default set to TPM 2.0 devices if not found, TPM 1.2 devices will be enumerated.	TPM 1.2, TPM 2.0, ★Auto

# RUBY-D718VG2AR

## Super IO Configuration

### System Super IO Chip Parameters.




Feature	Description	Options
<b>Watch Dog Timer</b> (Enabled)	Enable/Disable Watch Dog Timer	★ Disabled, Enabled
<b>Timer Unit</b>	Select Timer count unit of WDT	★ Second, Minute
<b>Timer value</b>	Set WDT Timer value	★ 20



# RUBY-D718VG2AR

## Serial Port 1 Configuration

Set Parameters of Serial Port 1

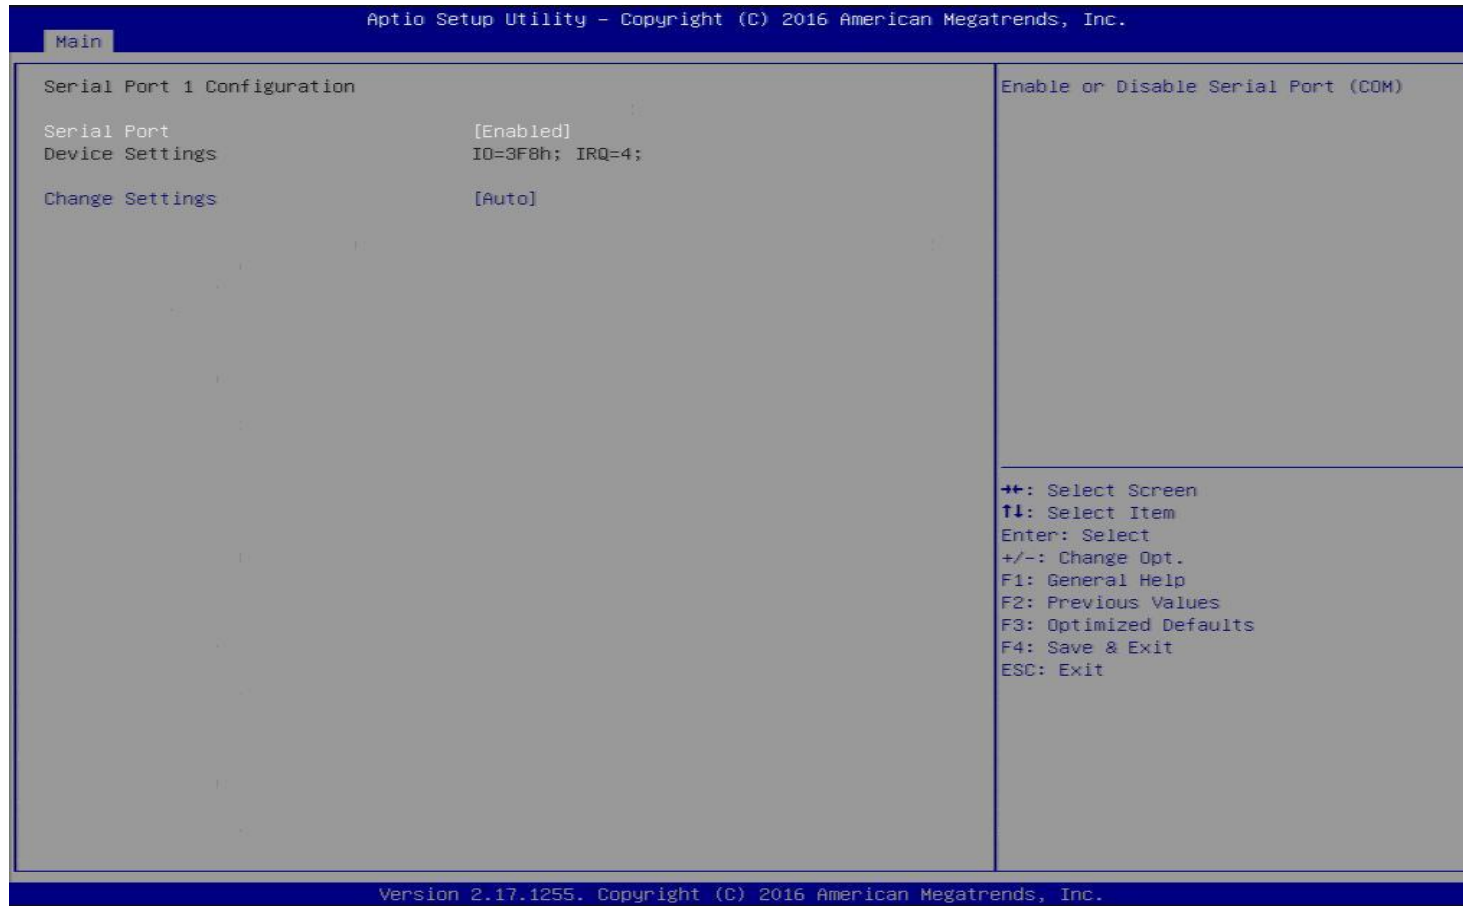

Feature	Description	Options
<b>Serial Port</b>	Enable or Disable Serial Port (COM)	Disabled, ★Enabled
<b>Change Settings</b>	Select an optimal settings for Super IO Device	★Auto, IO=3F8h; IRQ=4; IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12

# RUBY-D718VG2AR

## Serial Port 2 Configuration

### Set Parameters of Serial Port 2

The screenshot shows the 'Serial Port 2 Configuration' screen in the Aptio Setup Utility. The title bar reads 'Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.' and the current screen is labeled 'Main'. The screen is divided into two main sections. The left section, titled 'Serial Port 2 Configuration', contains the following settings:

Serial Port	[Enabled]
Device Settings	IO=2F8h; IRQ=3;
RS-232/422/485 Control Option	[RS-232]
Change Settings	[Auto]

The right section, titled 'Enable or Disable Serial Port (COM)', is currently empty. At the bottom right of the screen, a list of navigation keys is provided:

- ++: Select Screen
- ↑↓: Select Item
- Enter: Select
- +/-: Change Opt.
- F1: General Help
- F2: Previous Values
- F3: Optimized Defaults
- F4: Save & Exit
- ESC: Exit

The footer of the screen displays 'Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.'

# RUBY-D718VG2AR

Feature	Description	Options
<b>Serial Port</b>	Enable or Disable Serial Port (COM)	Disabled, ★ Enabled
<b>RS-232/422/485 Control Option</b>	Serial Port 2 RS-232/422/485 Control Option	★ RS-232, RS-485 , RS-422
<b>Change Settings</b>	Select an optimal settings for Super IO Device.	★ Auto, IO=2F8h; IRQ=3; IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=3E8h;IRQ=3,4,5,6,7,9,10,11,12 IO=2E8h;IRQ=3,4,5,6,7,9,10,11,12

# RUBY-D718VG2AR

## Serial Port 3 Configuration

### Set Parameters of Serial Port 3

The screenshot shows the 'Serial Port 3 Configuration' screen in the Aptio Setup Utility. The title bar reads 'Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.' and a 'Main' button is visible in the top left. The screen is divided into two main sections. The left section, titled 'Serial Port 3 Configuration', contains the following text: 'Serial Port [Enabled]', 'Device Settings IO=240h; IRQ=11;', and 'Change Settings [IO=240h; IRQ=11;]'. The right section, titled 'Enable or Disable Serial Port (COM)', is currently empty. At the bottom right of the screen, a list of navigation keys is provided: '++: Select Screen', '↑: Select Item', 'Enter: Select', '+/-: Change Opt.', 'F1: General Help', 'F2: Previous Values', 'F3: Optimized Defaults', 'F4: Save & Exit', and 'ESC: Exit'. The footer of the screen reads 'Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.'

Feature	Description	Options
<b>Serial Port</b>	Enable or Disable Serial Port (COM)	Disabled, ★Enabled
<b>Change Settings</b>	Select an optimal setting for Super IO Device.	Auto, ★IO=240h; IRQ=11, IO=240h; IRQ=3,4,5,6,7,10,11,12 IO=248h; IRQ=3,4,5,6,7,10,11,12 IO=250h; IRQ=3,4,5,6,7,10,11,12 IO=258h; IRQ=3,4,5,6,7,10,11,12

# RUBY-D718VG2AR

## Serial Port 4 Configuration

### Set Parameters of Serial Port 4

The screenshot shows the 'Serial Port 4 Configuration' screen in the Aptio Setup Utility. The title bar reads 'Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.' and a 'Main' button is visible in the top left. The screen is divided into two main sections. The left section, titled 'Serial Port 4 Configuration', contains the following text: 'Serial Port [Enabled]', 'Device Settings IO=248h; IRQ=11;', and 'Change Settings [IO=248h; IRQ=11;]'. The right section, titled 'Enable or Disable Serial Port (COM)', is currently empty. At the bottom right of the screen, a list of navigation keys is provided: '++: Select Screen', '↑: Select Item', 'Enter: Select', '+/-: Change Opt.', 'F1: General Help', 'F2: Previous Values', 'F3: Optimize Defaults', 'F4: Save & Exit', and 'ESC: Exit'. The footer of the screen displays 'Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.'

# RUBY-D718VG2AR

Feature	Description	Options
<b>Serial Port</b>	Enable or Disable Serial Port (COM)	Disabled, ★Enabled
<b>Change Settings</b>	Select an optimal settings for super IO Device	Auto, ★IO=248h; IRQ=11, IO=240h; IRQ=3,4,5,6,7,10,11,12; IO=248h; IRQ=3,4,5,6,7,10,11,12; IO=250h; IRQ=3,4,5,6,7,10,11,12; IO=258h; IRQ=3,4,5,6,7,10,11,12;



# RUBY-D718VG2AR

## Serial Port 5 Configuration

### Set Parameters of Serial Port 5

The screenshot shows the 'Serial Port 5 Configuration' screen in the Aptio Setup Utility. The title bar reads 'Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.' and there is a 'Main' button in the top left. The screen is divided into two main sections. The left section, titled 'Serial Port 5 Configuration', contains the following text: 'Serial Port [Enabled]', 'Device Settings IO=250h; IRQ=10;', and 'Change Settings [IO=250h; IRQ=10;]'. The right section, titled 'Enable or Disable Serial Port (COM)', is currently empty. At the bottom right of the screen, a list of navigation keys is provided: '++: Select Screen', '↑↓: Select Item', 'Enter: Select', '+/-: Change Opt.', 'F1: General Help', 'F2: Previous Values', 'F3: Optimized Defaults', 'F4: Save & Exit', and 'ESC: Exit'. The footer of the screen reads 'Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.'

Feature	Description	Options
<b>Serial Port</b>	Enable or Disable Serial Port (COM)	Disabled, ★Enabled
<b>Change Settings</b>	Select an optimal settings for super IO Device	Auto, ★IO=250h; IRQ=10, IO=240h; IRQ=3,4,5,6,7,10,11,12; IO=248h; IRQ=3,4,5,6,7,10,11,12; IO=250h; IRQ=3,4,5,6,7,10,11,12; IO=258h; IRQ=3,4,5,6,7,10,11,12;

# RUBY-D718VG2AR

## Serial Port 6 Configuration

### Set Parameters of Serial Port 6


The screenshot shows the 'Serial Port 6 Configuration' screen in the Aptio Setup Utility. The title bar reads 'Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.' and a 'Main' button is visible in the top left. The screen is divided into two main sections. The left section, titled 'Serial Port 6 Configuration', contains the following text: 'Serial Port [Enabled]', 'Device Settings IO=258h; IRQ=10;', and 'Change Settings [IO=258h; IRQ=10;]'. The right section, titled 'Enable or Disable Serial Port (COM)', is currently empty. At the bottom right of the screen, a list of keyboard shortcuts is provided: '++: Select Screen', '↑↓: Select Item', 'Enter: Select', '+/-: Change Opt.', 'F1: General Help', 'F2: Previous Values', 'F3: Optimized Defaults', 'F4: Save & Exit', and 'ESC: Exit'. The footer of the screen reads 'Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.'

Feature	Description	Options
<b>Serial Port</b>	Enable or Disable Serial Port (COM)	Disabled, ★Enabled
<b>Change Settings</b>	Select an optimal settings for Super IO Device	Auto, ★IO=258h; IRQ=10, IO=240h; IRQ=3,4,5,6,7,10,11,12; IO=248h; IRQ=3,4,5,6,7,10,11,12; IO=250h; IRQ=3,4,5,6,7,10,11,12; IO=258h; IRQ=3,4,5,6,7,10,11,12;

# RUBY-D718VG2AR

## H/W Monitor Configuration

### Monitor hardware status

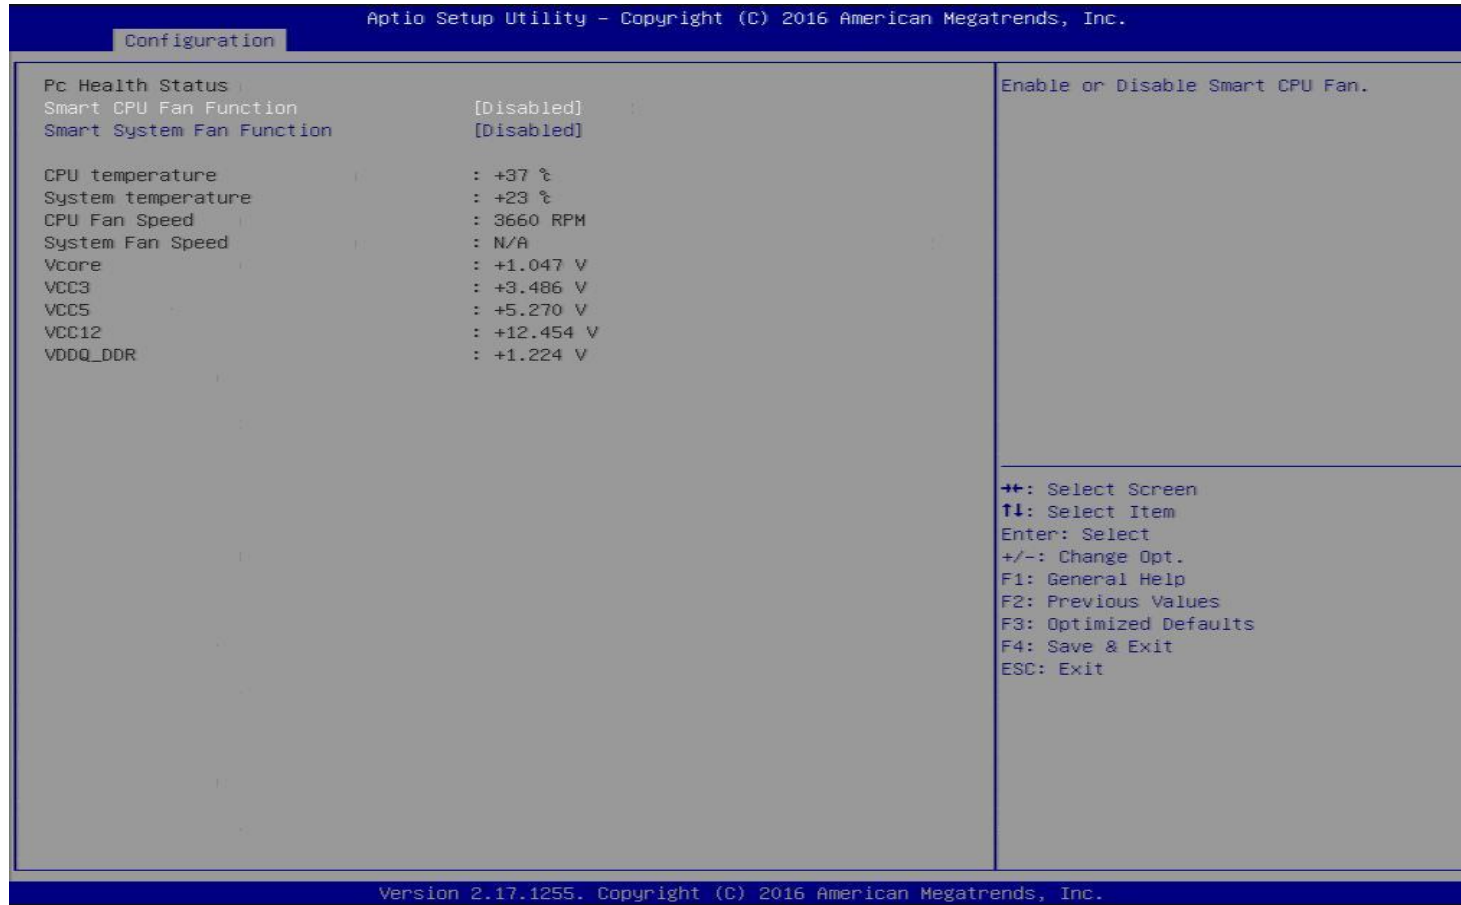

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

**Configuration**

Pc Health Status :  
Smart CPU Fan Function [Disabled]  
Smart System Fan Function [Disabled]

CPU temperature : +37 °C  
System temperature : +23 °C  
CPU Fan Speed : 3660 RPM  
System Fan Speed : N/A  
Vcore : +1.047 V  
VCC3 : +3.486 V  
VCC5 : +5.270 V  
VCC12 : +12.454 V  
VDDQ\_DDR : +1.224 V

Enable or Disable Smart CPU Fan.

++: Select Screen  
↑: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.


## RUBY-D718VG2AR

Feature	Description	Options
<b>Smart CPU Fan Function</b> (Enabled)	Enable or Disable Smart CPU Fan	★ Disabled, Enabled
<b>CPU Start Target Temp</b>	CPU Start Fan Target Temperature.	★ 50
<b>CPU Full Target Temp</b>	CPU Full fan target temperature.	★ 50
<b>Smart System Fan Function</b> (Enabled)	Enable or Disable Smart System Fan	★ Disabled, Enabled
<b>System Start Target Temp</b>	System Start Fan Target Temperature.	★ 50
<b>System Full Target Temp</b>	System Full fan target temperature.	★ 50

# RUBY-D718VG2AR

## Serial Port Console Redirection

### Serial Port Console Redirection

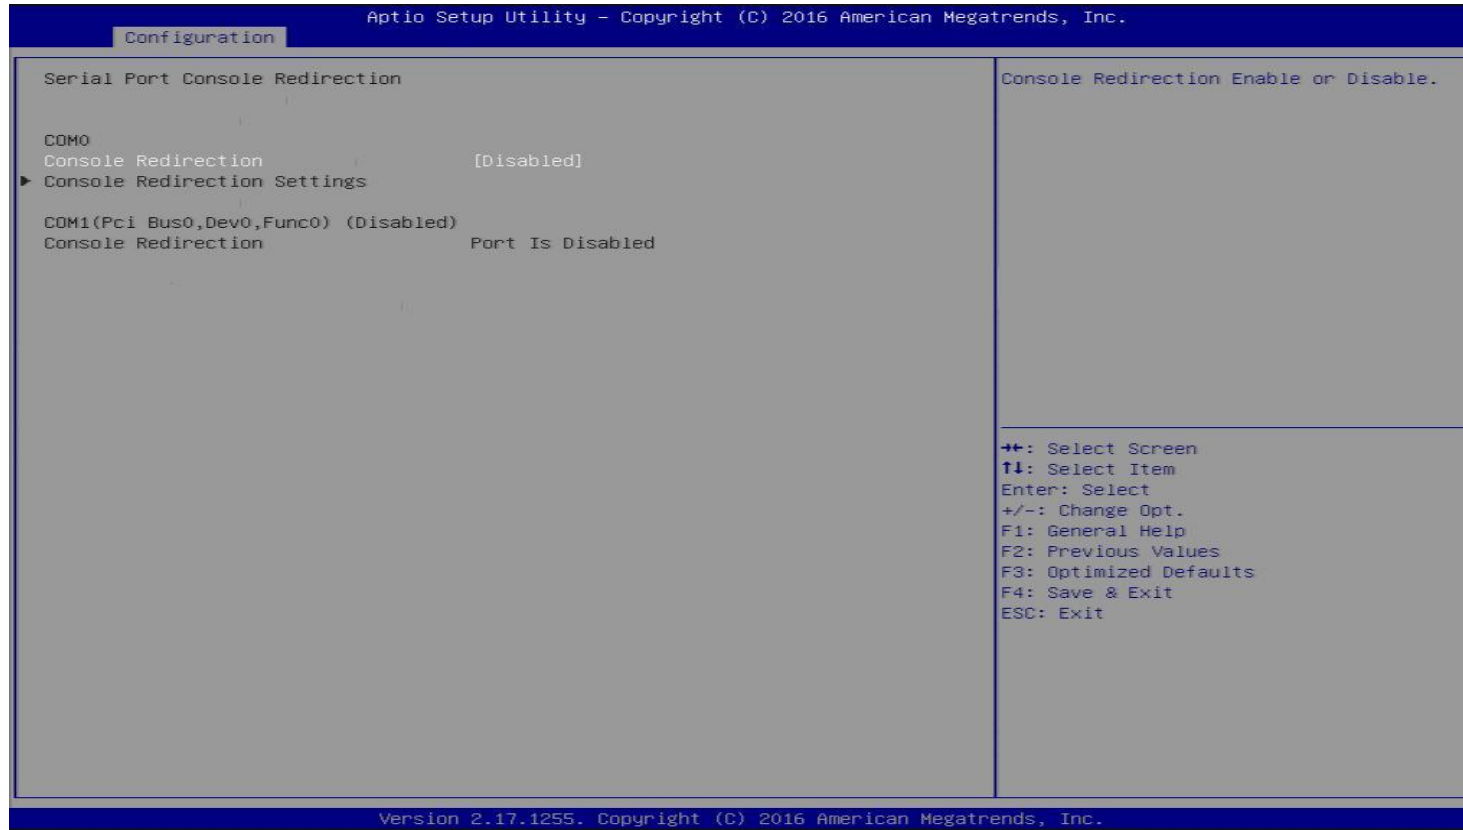

Feature	Description	Options
<b>Console Redirection (COM 0)</b> (Enabled)	Console Redirection Enable or Disable.	★Disabled, Enabled

# RUBY-D718VG2AR

## COM 0 Serial Port Console Redirection

### Serial Port Console Redirection

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.

Configuration

COM0 Console Redirection Settings		Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
Terminal Type	[ANSI]	
Bits per second	[115200]	
Data Bits	[8]	
Parity	[None]	
Stop Bits	[1]	
Flow Control	[None]	
VT-UTF8 Combo Key Support	[Enabled]	
Recorder Mode	[Disabled]	
Resolution 100x31	[Disabled]	
Legacy OS Redirection Resolution	[80x24]	
Putty KeyPad	[VT100]	
Redirection After BIOS POST	[Always Enable]	

++: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit



Feature	Description	Options
<b>Terminal Type</b>	Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.	VT100, VT100+, VT-UTF8, ★ANSI
<b>Bits per second</b>	Select Serial port transmission speed. The speed must be matched on other side. Long or noisy lines may require lower speeds.	9600, 19200, 38400, 57600, ★115200
<b>Data bits</b>	Data bits	7, ★8
<b>Parity</b>	A parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if num of 1's in the data bits is odd. Mark: parity bit is always 1. Space parity bit is always 0. Mark and Space Parity do not allow for error detection. They can be used as an additional data bit.	★None, Even, Odd, Mark, Space
<b>Stop Bits</b>	Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.	★1,2
<b>Flow Control</b>	Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.	★None, Hardware RTS/CTS
<b>VT-UTFB Combo Key Support</b>	Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals	Disabled, ★Enabled
<b>Recorder Mode</b>	With this mode enabled only text will be sent. This is to capture Terminal data.	★Disabled, Enabled


## RUBY-D718VG2AR

<b>Resolution 100x31</b>	Enables or disables extended terminal resolution	★Disabled, Enabled
<b>Legacy OS Redirection Resolution</b>	On Legacy OS, the Number of Rows and Columns supported redirection	★80x24, 80x25
<b>Putty KeyPad</b>	Select FunctionKey and KeyPad on Putty	★ VT100, LINUX,XTERMR6, SCO,ESCN,VT400
<b>Redirection After BIOS POST</b>	The settings specify if BootLoader is selected then Legacy console redirection is disabled before booting to legacy OS. Default value is Always Enable which means Legacy console Redirection is enabled for Legacy OS.	★Always Enable, BootLoader

# RUBY-D718VG2AR

## 7.2.3 Security

This section lets you set security passwords to control access to the system at boot time and/or when entering the BIOS setup program.

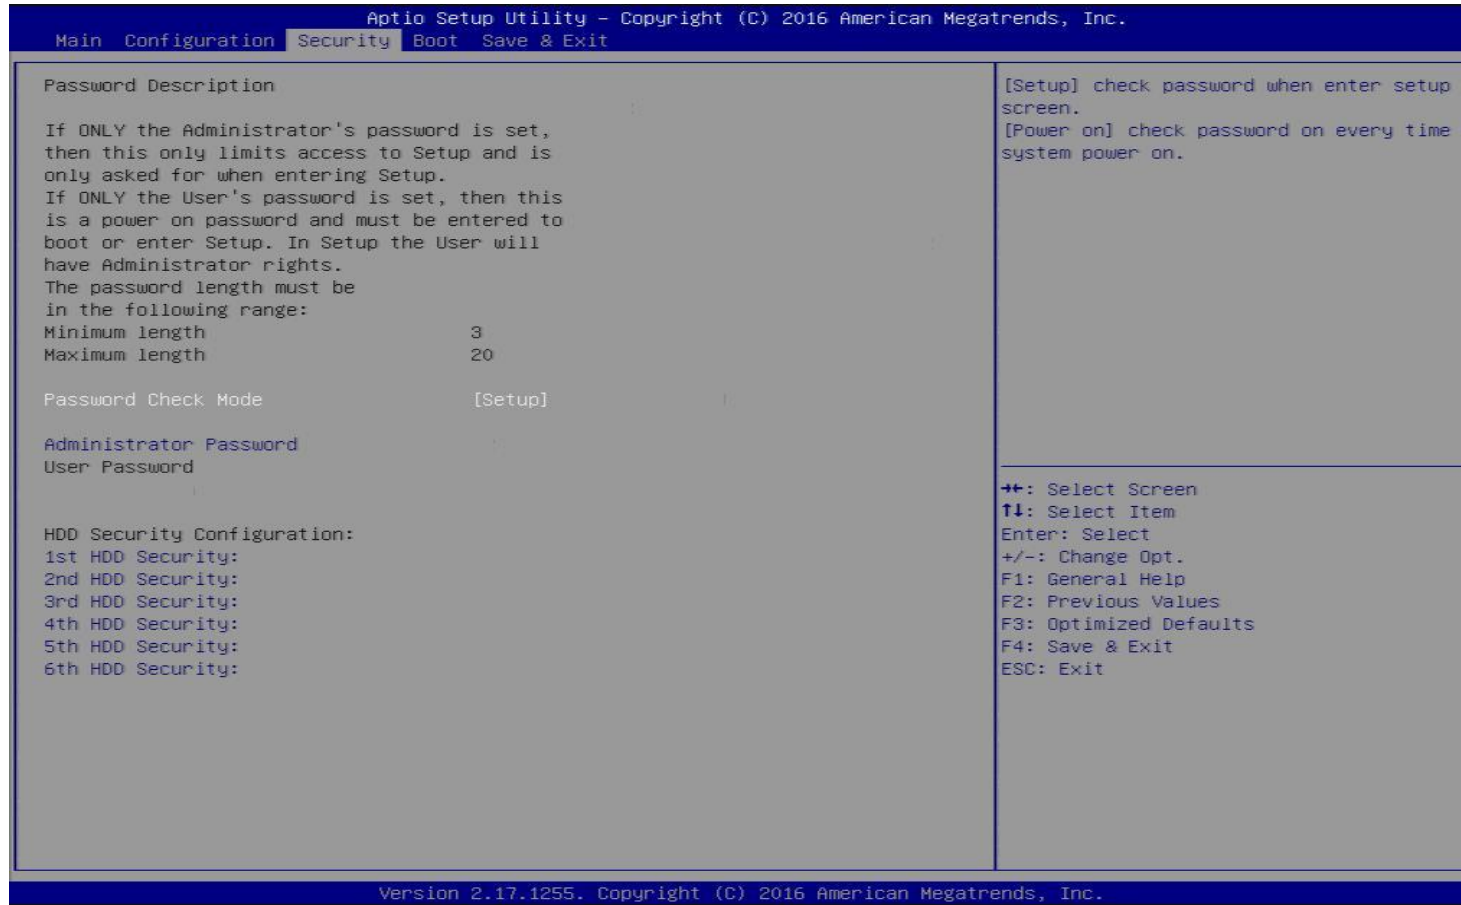


## RUBY-D718VG2AR

Feature	Description	Options
<b>Password Check Mode</b>	[Setup] check password when enter setup screen. [Power on] check password on every time system power on.	★ Setup, Power on
<b>Administrator Password</b>	Set Administrator Password	
<b>1st - 6th HDD Security</b>	HDD Security Configuration for selected drive.	

# RUBY-D718VG2AR

## 7.2.4 Boot

Use this menu to specify the priority of boot devices.

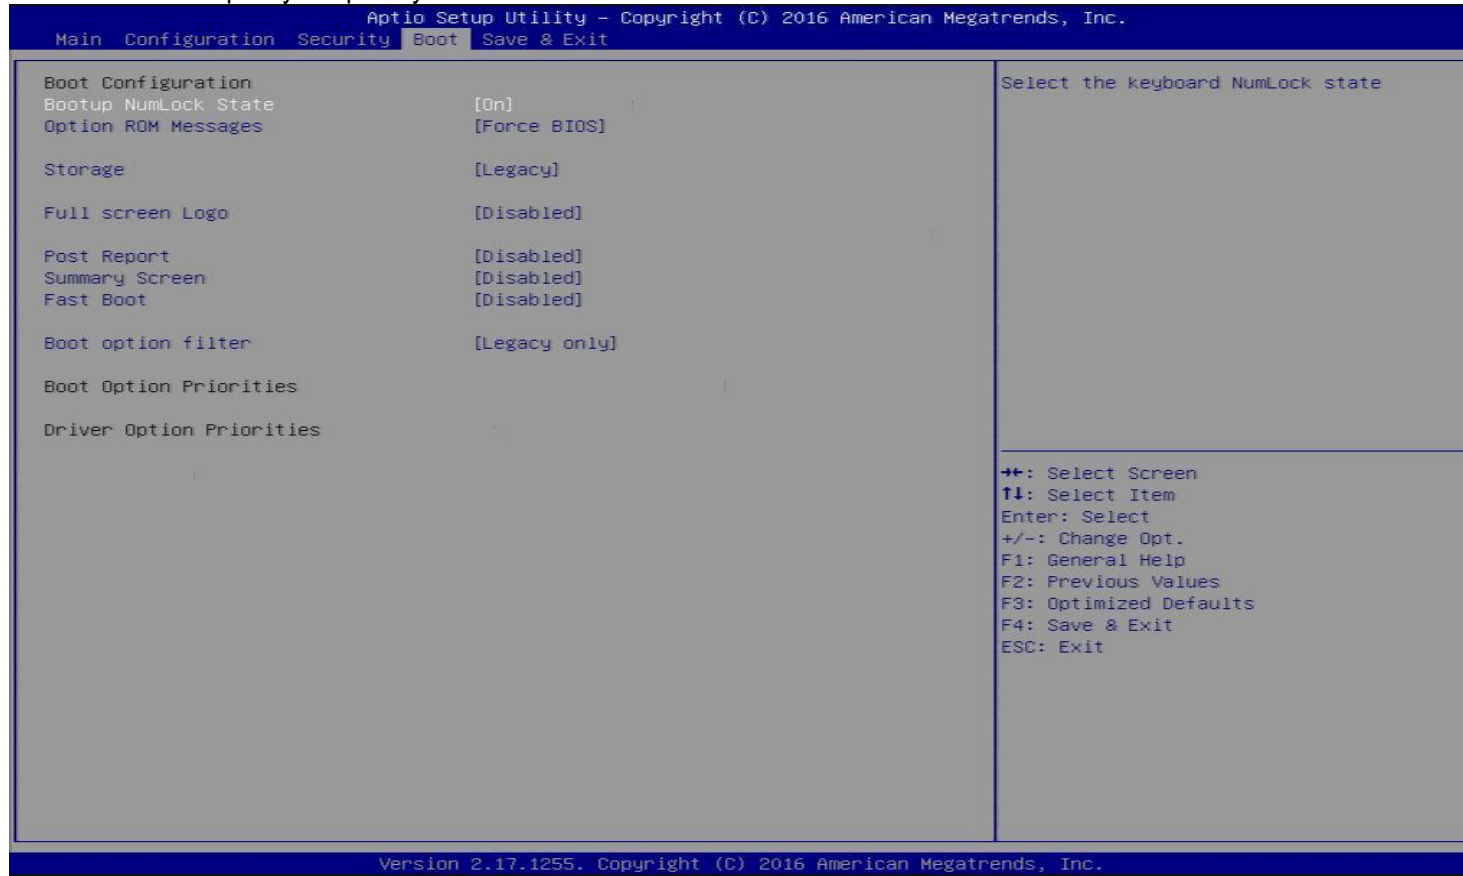

## RUBY-D718VG2AR

Feature	Description	Options
<b>Bootup NumLock State</b>	Select the keyboard NumLock state	★On, Off
<b>Option ROM Messages</b>	Set display mode for Option ROM	★Force BIOS, Keep Current
<b>Storage</b>	Controls the execution of UEFI and Legacy Storage OpROM	Do not Launch, UEFI, ★Legacy
<b>Full screen Logo</b>	Enables or disables Quiet Boot option and Full screen Logo.	★Disabled, Enabled
<b>Post Report</b>	Post Report Support Enabled/Disabled	★Disabled, Enabled
<b>Summary Screen</b>	Summary Screen Support Enabled/Disabled	★Disabled, Enabled
<b>Fast Boot</b>	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.	★Disabled, Enabled
<b>Boot option filter</b>	This option controls Legacy/UEFI ROMs priority	★Legacy only, UEFI only

# RUBY-D718VG2AR

## 7.2.5 Save & Exit



Feature	Description	Options
<b>Save Changes and Reset</b>	Reset the system after saving the changes.	
<b>Discard Changes and Reset</b>	Reset system setup without saving any changes.	
<b>Restore Defaults</b>	Restore/Load Default values for all the setup options.	
<b>Launch EFI Shell from filesystem device</b>	Attempts to Launch EFI Shell application (Shell.efi) from one of the available filesystem devices.	




## 8 Troubleshooting

This section provides a few useful tips to quickly get RUBY-D718VG2AR running with success. This section will primarily focus on system integration issues, in terms of BIOS setting, and OS diagnostics.

### 8.1 Hardware Quick Installation

#### ATX Power Setting

Unlike other Single board computer, RUBY-D718VG2AR supports ATX only. Therefore, there is no other setting that needs to be set up. However, there are only two connectors that must be connected—J9 (4 pins ATX power connector) & J38 (24 pins ATX Power Connector) on the RUBY-D718VG2AR board.

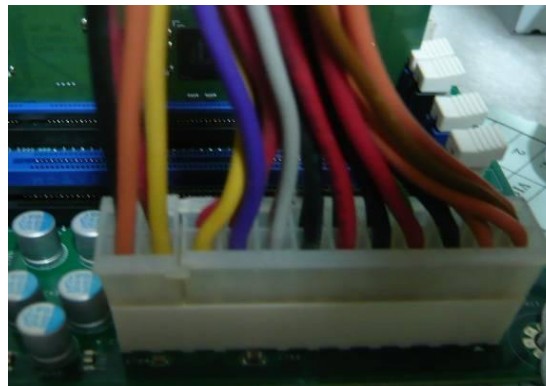


# RUBY-D718VG2AR

## Serial ATA

Unlike IDE bus, each Serial ATA channel can only connect to one SATA hard disk at a time;

The installation of Serial ATA is simpler and easier than IDE, because SATA hard disk doesn't require setting up Master and Slave, which can reduce mistake of hardware installation.

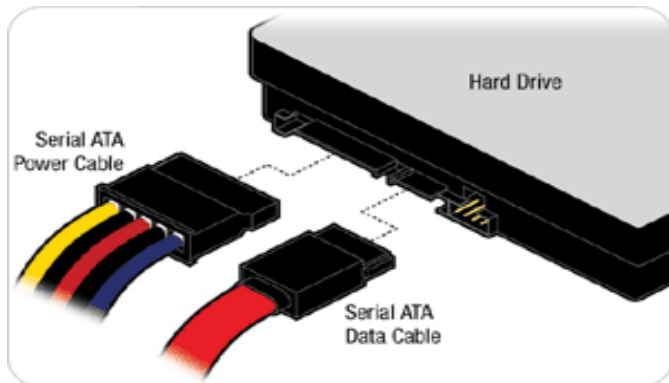

RUBY-D718VG2AR can support Six SATA interface (SATAIII, 6.0Gb/s) with AHCI or IDE mode.

## 8.2 BIOS Setting

It is assumed that users have correctly adopted modules and connected all the devices cables required before turning on ATX power. 288-pin DDR4 Memory, keyboard, mouse, SATA hard disk, VGA connector, power cable of the device, ATX accessories are good examples that deserve attention. With no assurance of properly and correctly accommodating these modules and devices, it is very possible to encounter system failures that result in malfunction of any device.

To make sure that you have a successful start with RUBY-D718VG2AR, it is recommended, when going with the boot-up sequence, to hit “Del ” or ” Esc” key and enter the BIOS setup menu to tune up a stable BIOS configuration so that you can wake up your system far well.

### Loading the default optimal setting

When prompted with the main setup menu, please scroll down to “Restore Defaults”, press “Enter” and select “Yes” to load default optimal BIOS setup. This will force your BIOS setting back to the initial factory configurations. It is recommended to do this so you can be sure the system is running with the BIOS setting that Portwell has highly endorsed. As a matter of fact, users can load the default BIOS setting at any time when system appears to be unstable in boot up sequence.

## 8.3 FAQ

### Information & Support

Question: I forgot my password of system BIOS, what am I supposed to do?

Answer: You can switch off your power supply then find the JP5 of the RUBY-D718VG2AR to set it from 1-2 short to 2-3 short and wait 5 seconds to clean your password then set it back to 1-2 short to switch on your power supply.

#### JP5 : CMOS Setting

Pin No	Jumper Setting Describe
*1-2	Default
2-3	Clean CMOS

**Question: How to update the BIOS file of RUBY-D718VG2AR?**

**Answer:**1. Please visit web site of **Portwell download center** as below hyperlink

[http://www.portwell.com.tw/support/download\\_center.php](http://www.portwell.com.tw/support/download_center.php)

Registering an account in advance is a must. **(The E-Mail box should be an existing Company email address that you check regularly.)**

<http://www.portwell.com.tw/member/newmember.php>

2. Type in your User name and password and log in the download center.
3. Select **“Search download”** and type the keyword **“RUBY-D718VG2AR”**.
4. Find the **“BIOS”** page and download the ROM file and flash utility.
5. Unzip file to bootable USB flash drive which can boot to dos mode. Then execute the **“update.bat”**. It will start to update BIOS.



```
Microsoft(R) Windows 98
(C)Copyright Microsoft Corp 1981-1999.
C:\>update_
```

## RUBY-D718VG2AR

6. When you see the “**FPT Operation Passed**” message, which means the BIOS update processes finished. Please cut the AC power off and **wait for 10 seconds** before powering on.

```
- Erasing Flash Block [0x0E3000] - 100% complete.
- Programming Flash [0x0E3000] 4KB of 4KB - 100% complete.
- Erasing Flash Block [0xA07000] - 100% complete.
- Programming Flash [0xA07000] 28KB of 28KB - 100% complete.
- Erasing Flash Block [0xA26000] - 100% complete.
- Programming Flash [0xA26000] 28KB of 28KB - 100% complete.
- Erasing Flash Block [0xA40000] - 100% complete.
- Programming Flash [0xA40000] 4KB of 4KB - 100% complete.
- Erasing Flash Block [0xC5E000] - 100% complete.
- Programming Flash [0xC5E000] 1940KB of 1940KB - 100% complete.
- Erasing Flash Block [0xFB7000] - 100% complete.
- Programming Flash [0xFB7000] 88KB of 88KB - 100% complete.
- Erasing Flash Block [0xFD9000] - 100% complete.
- Programming Flash [0xFD9000] 4KB of 4KB - 100% complete.
- Verifying Flash [0x1000000] 16384KB of 16384KB - 100% complete.
RESULT: The data is identical.

FPT Operation Passed
C:\_FLASH>
C:\>
C:\>_
```

7. Press “**del**” key into the BIOS setup menu and switch to “**Save & Exit**” page then select “**Restore Defaults**” option and press “**Yes**” then select “**Save Changes and Reset**” to finish all BIOS update processes.

```
Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.
Main Configuration Security Boot Save & Exit

Save Changes and Reset
Discard Changes and Reset

Restore Defaults
Boot Override
UEFI: Built-in EFI Shell

Launch EFI Shell from filesystem device

Reset the system after saving
the changes.

++: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.
```

## RUBY-D718VG2AR

**Question: What are the display options while using RUBY-D718VG2AR ?**

**Answer:** The RUBY-D718VG2AR supports DVI · VGA and HDMI display output.

**Note:**

Please visit our Download Center to get the Catalog, User manual, BIOS, and driver files.

[http://www.portwell.com.tw/support/download\\_center.php](http://www.portwell.com.tw/support/download_center.php)

If you have other additional technical information or request which is not covered in this manual, please fill in the technical request form as below hyperlink.

[http://www.portwell.com.tw/support/problem\\_report.php](http://www.portwell.com.tw/support/problem_report.php)

We will do our best to provide a suggestion or solution for you.

Thanks

## 9 Portwell Software Service

### Portwell Evaluation Tool (PET)

The Portwell Evaluation Tool (PET) is an API which Portwell's customers can access the GPIO, I2C, SMBus, etc under Windows and Linux OS. For more information please contact Portwell.

### Portwell BIOS web Tool (PBT)

The Portwell BIOS web Tool (PBT) is a brand new on-line utility which innovated by Portwell. PBT now is available for Portwell's premiere customers who are able to add customized BIOS logo and change BIOS default settings on American Megatrends (AMI) BIOS. Please contact Portwell for more information.

### Portwell EC Auto Test Tool (PECAT)

The Portwell EC Auto Test Tool (PECAT) is a brand new utility which innovated by Portwell. PECAT now is available for Portwell's premiere customers, who are able to Test Embedded Controller Function in UEFI Mode. Please contact Portwell for more information.



## 10 Industry Specifications

The list below provides links to industry specifications that apply to Portwell modules.

Low Pin Count Interface Specification, Revision 1.0 (LPC) <http://www.intel.com/design/chipsets/industry/lpc.htm>

Universal Serial Bus (USB) Specification, Revision 2.0 <http://www.usb.org/home>

PCI Specification, Revision 2.3 <https://www.pcisig.com/specifications>

Serial ATA Specification, Revision 3.0 <http://www.serialata.org/>

PCI Express Base Specification, Revision 2.0 <https://www.pcisig.com/specifications>